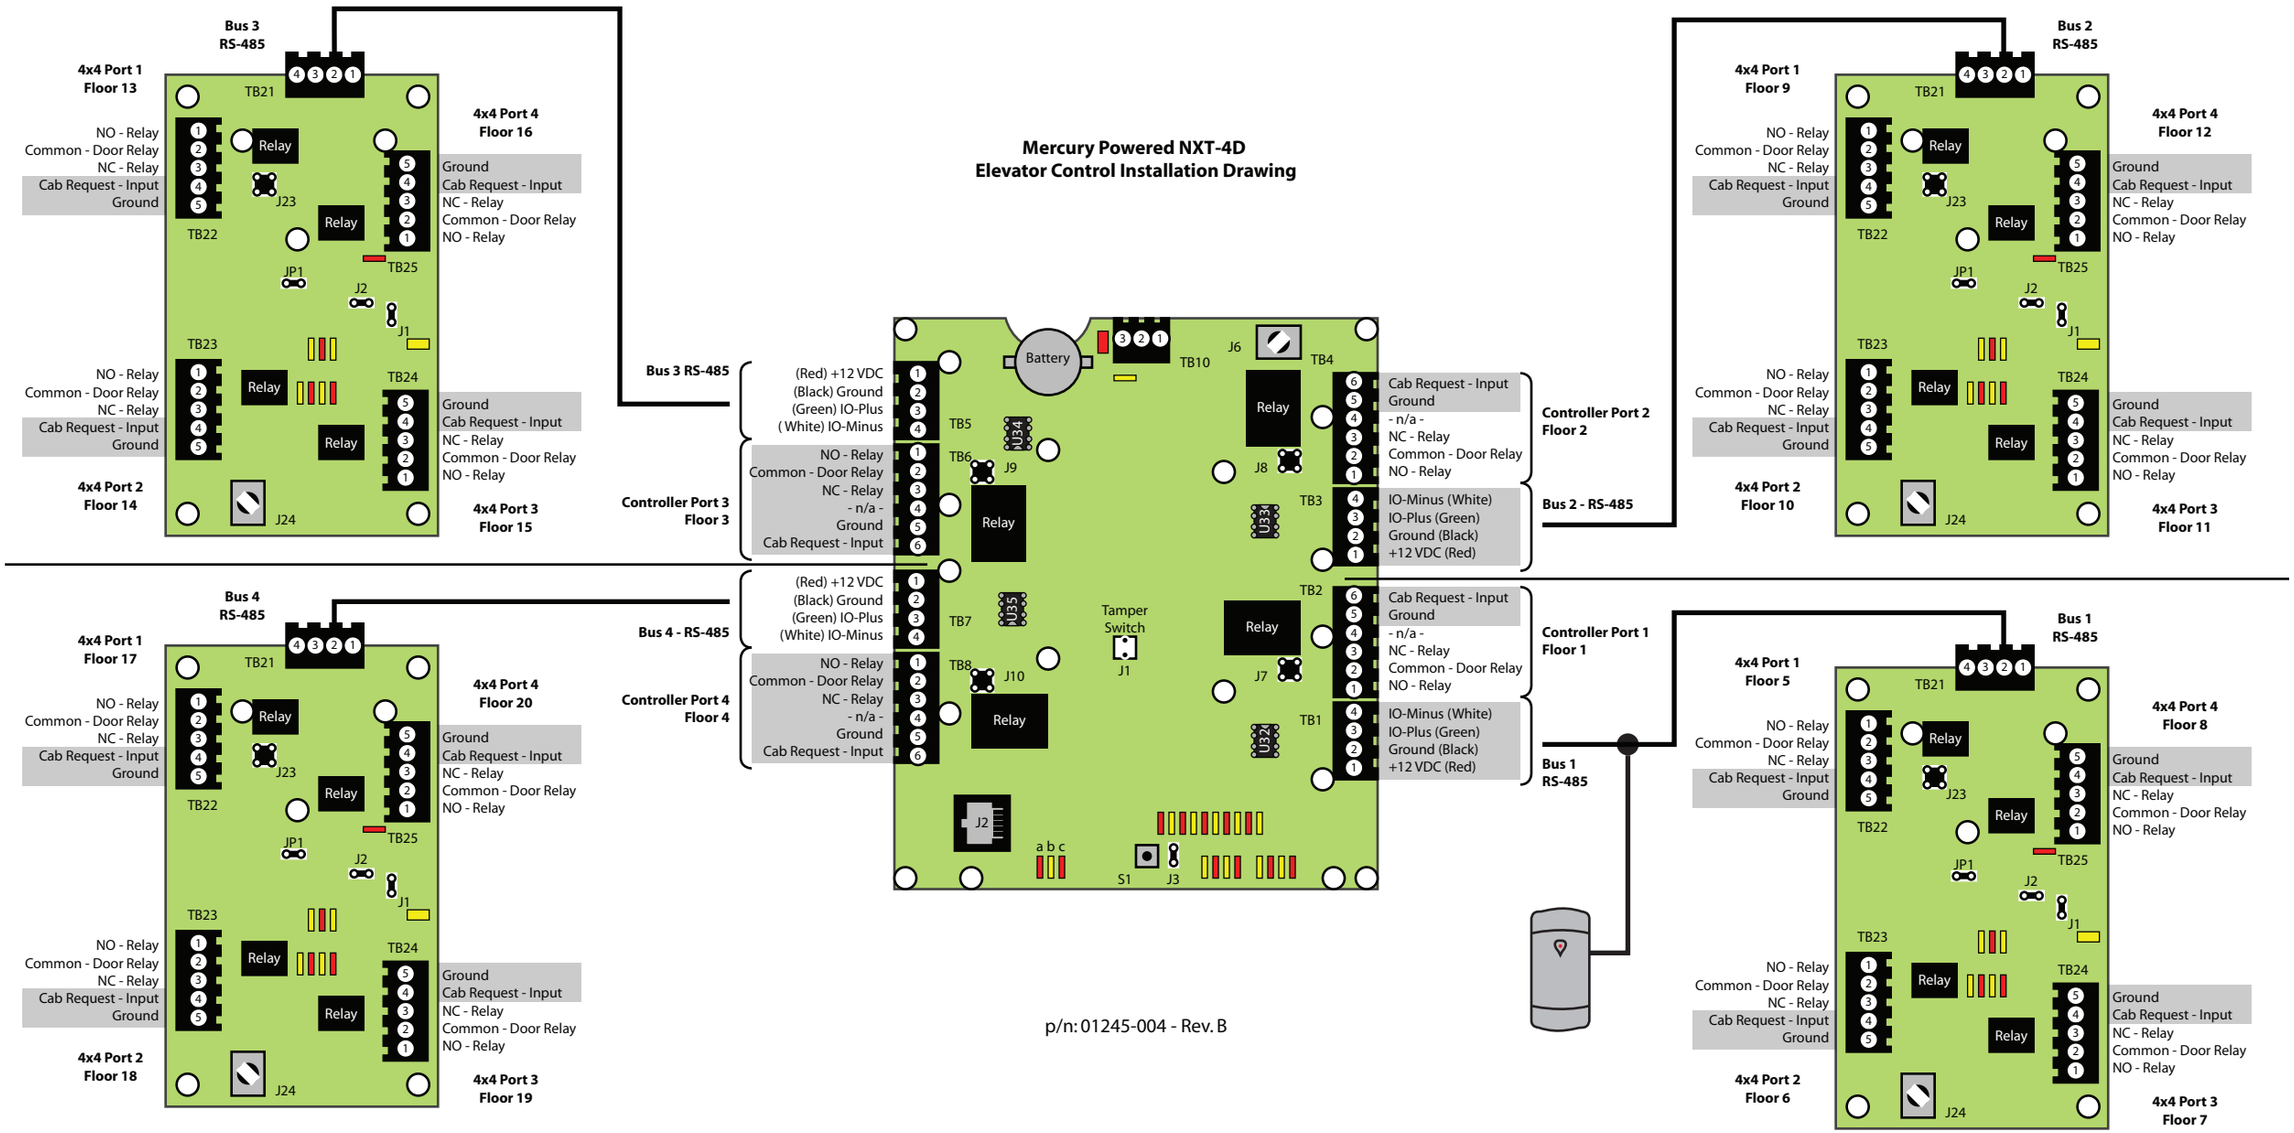
Mercury Powered NXT-4D
Elevator Control Installation Drawing
Bus 3 RS-485
4x4 Port 1 Floor 13
NO - Relay
Common - Door Relay
NC - Relay
Cab Request - Input
Ground
4x4 Port 4 Floor 16
Ground
Cab Request - Input
NC - Relay
Common - Door Relay
NO - Relay
4x4 Port 2 Floor 14
4x4 Port 3 Floor 15
Bus 4 RS-485
4x4 Port 1 Floor 17
4x4 Port 4 Floor 20
4x4 Port 2 Floor 18
4x4 Port 3 Floor 19
Bus 3 RS-485
(Red) +12 VDC
(Black) Ground
(Green) IO-Plus
(White) IO-Minus
Controller Port 3 Floor 3
Bus 4 - RS-485
Controller Port 4 Floor 4
Battery
Tamper Switch
Controller Port 2 Floor 2
IO-Minus (White)
IO-Plus (Green)
Ground (Black)
+12 VDC (Red)
Bus 2 - RS-485
Controller Port 1 Floor 1
Bus 1 RS-485
Bus 2 RS-485
4x4 Port 1 Floor 9
4x4 Port 4 Floor 12
4x4 Port 2 Floor 10
4x4 Port 3 Floor 11
Bus 1 RS-485
4x4 Port 1 Floor 5
4x4 Port 4 Floor 8
4x4 Port 2 Floor 6
4x4 Port 3 Floor 7
p/n: 01245-004 - Rev. B