INSTALLATION

FRAME PREP JIG

For 4 and 7 Series Electric Strikes

RUTHERFORD CONTROLS
A DORMA Group Company

In or Out... we make it Easy!®

Instructions

1) Take measurement from floor to Centerline (CL) of lockset latch on door.

2) Transfer measurement to door frame and mark CL on frame.

3) Align CL mark on frame with CL mark (B) on jig.

4) Mark frame and drill the two mounting holes (A). (These will be used later to install mounting tabs for electric strike.) Drill and tap for #12 screws.

5) Attach jig to frame using screws provided.(In strike hardware pack)

6) For aluminum frames router cut out in the frame following the jig. (1/4" single flute carbide bit and a 5/16" guide bushing recommended.)

   For hollow metal frames, trace the cutout outline onto the door frame. Remove the jig and cut on the inside of the traced outline using a jigsaw. File corners of frame cutout to accomodate a square faceplate.

7) Mount ***RCI*** electric strike using installation instructions provided with strike.

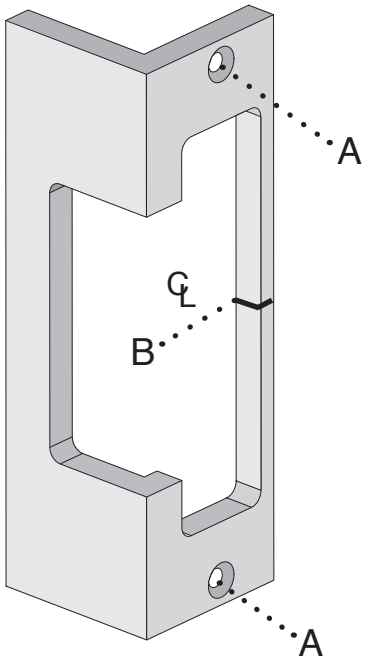

Not to scale

©2013 RUTHERFORD CONTROLS • WWW.RUTHERFORDCONTROLS.COM
USA: 2517 SQUADRON COURT, SUITE 104, VIRGINIA BEACH, VA 23453 • CANADA: 210 SHEARSON CRESCENT, CAMBRIDGE, ON N1T 1J6
PHONE • 1.800.265.6630 • 519.621.7651 • FAX: 1.800.482.9795 • 519.621.7939 • E-MAIL: SALES@RUTHERFORDCONTROLS.COM

PCN13023
R05/13CA