INSTALLATION

FRAME PREP JIG

RUTHERFORD CONTROLS
A DORMA Group Company

For L6 and S6 Series Electric Strikes

In or Out... we make it Easy!®

Instructions

1) Take measurement from floor to centre line (CL) of lockset latch on door.

2) Transfer measurement to door frame and mark CL on frame.

3) Align CL mark on frame with CL mark (B) on jig.

4) Mark frame and drill the two mounting holes (A). (These will be used later to install mounting tabs for electric strike.) Drill and tap for #12-24 screws.

5) Attach jig to frame using screws provided. (In strike hardware pack)

6) For aluminum frames router cut out in the frame following the jig. (1/4 “single flute carbide bit and a 5/16” guide bushing recommended.)

   For metal frames, trace the cutout outline onto the door frame. Remove the jig and cut on the inside of the traced outline using a jigsaw. File corners of frame cutout to accomodate a square faceplate.

7) Mount RCI electric strike using installation instructions provided with strike.

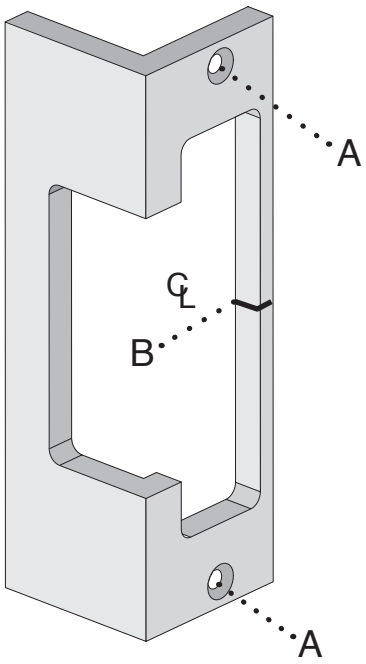

Not to scale

© 2014 RUTHERFORD CONTROLS INT'L | A DORMA GROUP COMPANY
WWW.RUTHERFORDCONTROLS.COM • PHONE: 1.800.265.6630 • FAX: 1.800.482.9795 • E-MAIL: SALES@RUTHERFORDCONTROLS.COM

PCN14014
R02/14TG