INSTALLATION

Electric Strike Lip Bracket Extensions For 4, 6, 7 Series Electric Strikes

RUTHERFORD CONTROLS
A DORMA Group Company

In or Out... we make it Easy!®

Extension Mounting Instructions For Center-Hung Doors or Deep-Reveal Frames

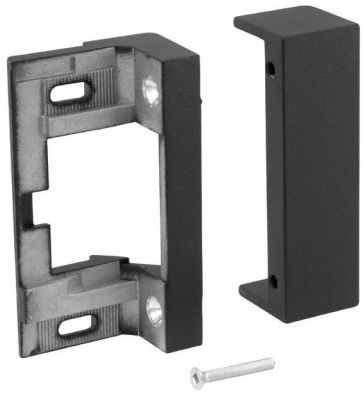

1″ Extension
#6-32 x 1″ Screws



2″ Extension
#6-32 x 2″ Screws

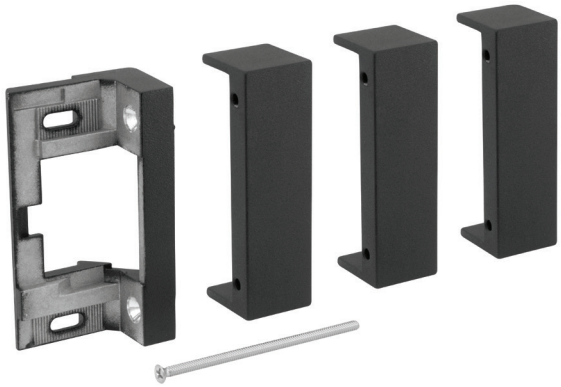

3″ Extension
#6-32 x 3″ Screws

NOTE: These 6 Series Low Profile photos show how the extensions mount.
The strike lip bracket will look slightly different on the Standard Profile 6 and the 4/7 series.

© 2014 RUTHERFORD CONTROLS INT'L | A DORMA GROUP COMPANY
WWW.RUTHERFORDCONTROLS.COM • PHONE: 1.800.265.6630 • FAX: 1.800.482.9795 • E-MAIL: SALES@RUTHERFORDCONTROLS.COM
PCN13078
R02/14TG