Strikes

Models 10-055, 10-081, 10-094

Jamb Type: Metal
Style: Square Corner, Deadbolt
Standard for: B600/700/800-Series | B280-Series | B/BA300-Series | BC100-Series | BE-Series | BR260-Series
Optional for:

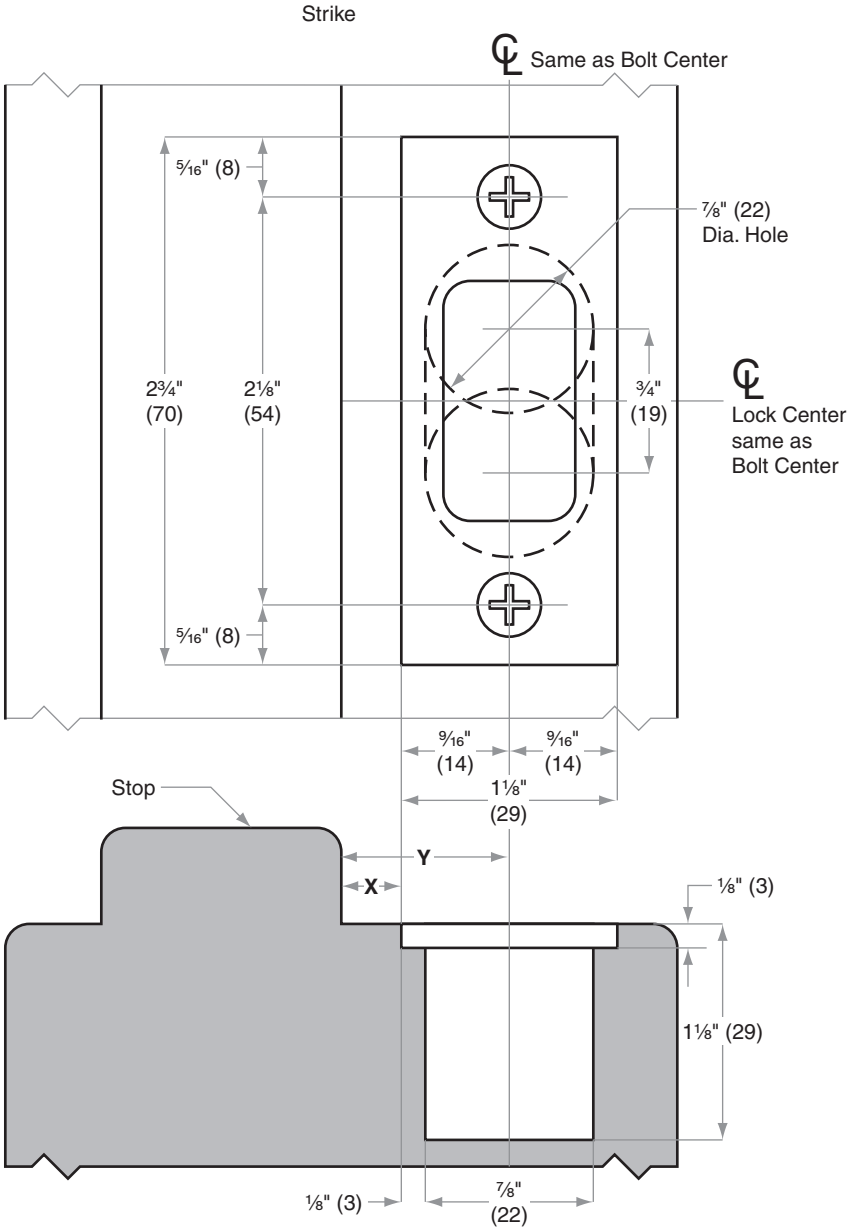

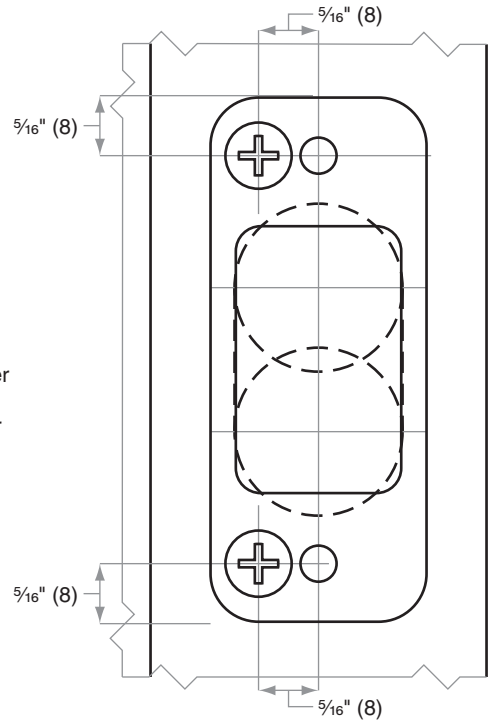

NOTE:
1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and ⅛" (3) deeper mortise
2. For use with 1" (25) throw deadbolt functions
3. Dimensions X and Y are variables dependent on door thickness
4. Strike location on frames must be adjusted for thickness of door silencers when used

Dimensions shown in parentheses ( ) are in millimeters.

Door preparation template

J884

© 2016 Allegion
J884 Rev. 07/16
www.allegion.com/us