



**AMERICAN SPECIALTIES, INC.**  
 441 Saw Mill River Road, Yonkers, NY 10701  
 (914) 476.9000 • (914) 476.0688  
 www.americanspecialties.com

**MODEL №:** 0661-1/2

**ISSUED:** 29 JAN 2019

**REVISED:** 23 JAN 2020

**VELARE™ BTM SYSTEM CABINET INSTALLATION GUIDE (Pg 1 of 3)**

**IMPORTANT: READ THESE INSTRUCTIONS COMPLETELY PRIOR TO BEGINNING INSTALLATION & RETAIN FOR FUTURE REFERENCE WITH SUB-SYSTEM OM'S.**

Open the mirrored door using the tumbler lock located at the bottom of unit in order to access the interior of the module. Use caution when opening the door as the gas springs will raise the door from closed position. Remove and retain the key for future access.

**Pack contents:**

- 1x 12V AC/DC Adapter with 1 output plug for Liquid Soap Dispenser
- 1x 12V AC/DC Adapter with 2 output plugs for EL Lighting System
- 2x Mounting Hanging Brackets

**INSTALLATION OF WALL MOUNTING HANGER HOOKS**

Appropriate wall reinforcement and AC quad outlet must be prepared prior to initiating the Velare™ BTM System installation (see Fig. 2 for blocking reference and Fig. 5 for Electrical KO location). Install the two (2) wall mounting hanger hooks located in the interior of the module on wall using twelve (12) № 12 self-threading, pan-head screws (by others) (Fig. 1) into appropriate wall reinforcements (Fig. 2). Hang the cabinet on wall mounting hanger hooks (Fig. 3). Suggested mounting height is to position bottom of module 16" [406] to 20" [508] above vanity top (Fig. 4). Power can be provided to the interior of module through the Electrical Service KO for quad outlets located at the back of the cabinet.

**IMPORTANT:** Install two (2) № 12 self-threading locking screws (by others) at the security locking holes to prevent unit from being lifted off hanger hooks.

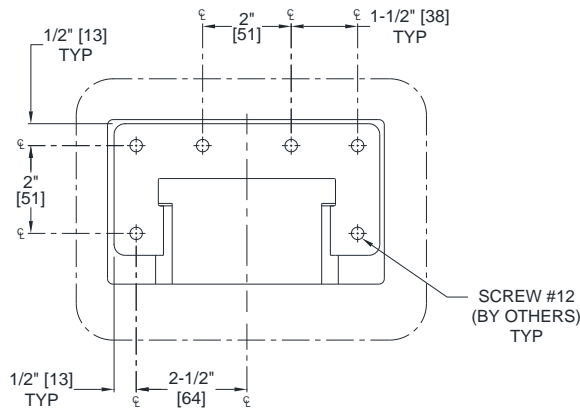


FIG. 1

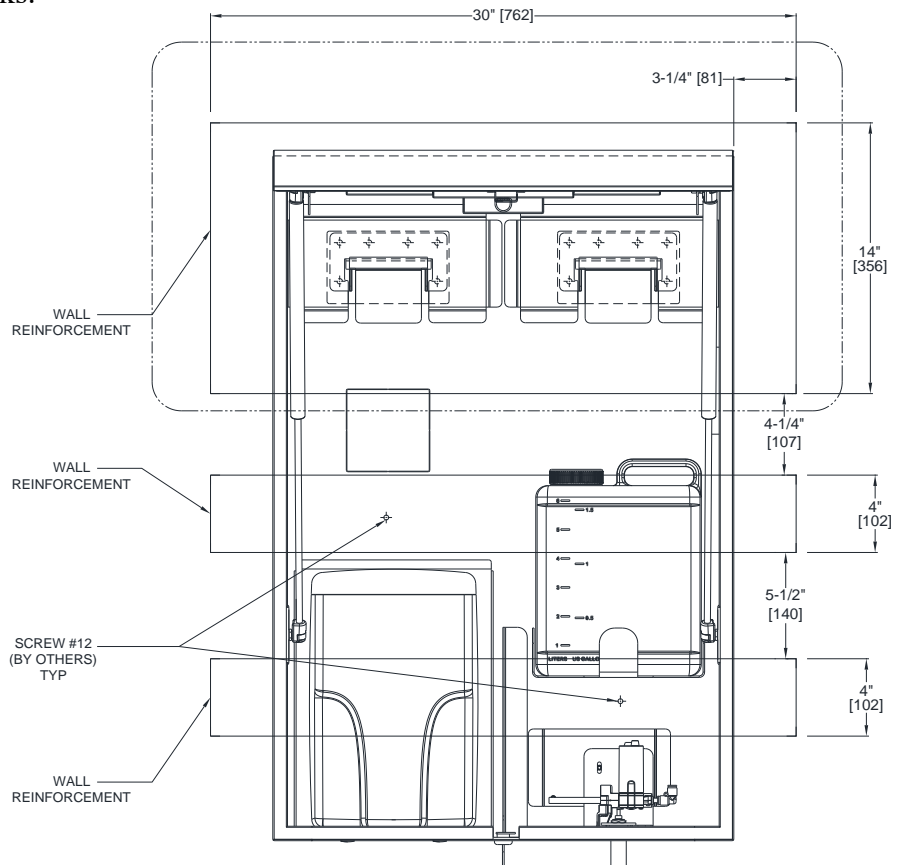


FIG. 2

**NOTES:**  
 Dim's inch [mm] & NTS  
 See TDS for Dim's not shown



**AMERICAN SPECIALTIES, INC.**  
441 Saw Mill River Road, Yonkers, NY 10701  
(914) 476.9000 • (914) 476.0688  
www.americanspecialties.com

**MODEL №:** 0661-1/2

**ISSUED:** 29 JAN 2019

**REVISED:** 23 JAN 2020

## VELARE™ BTM SYSTEM CABINET INSTALLATION GUIDE (Pg 2 of 3)

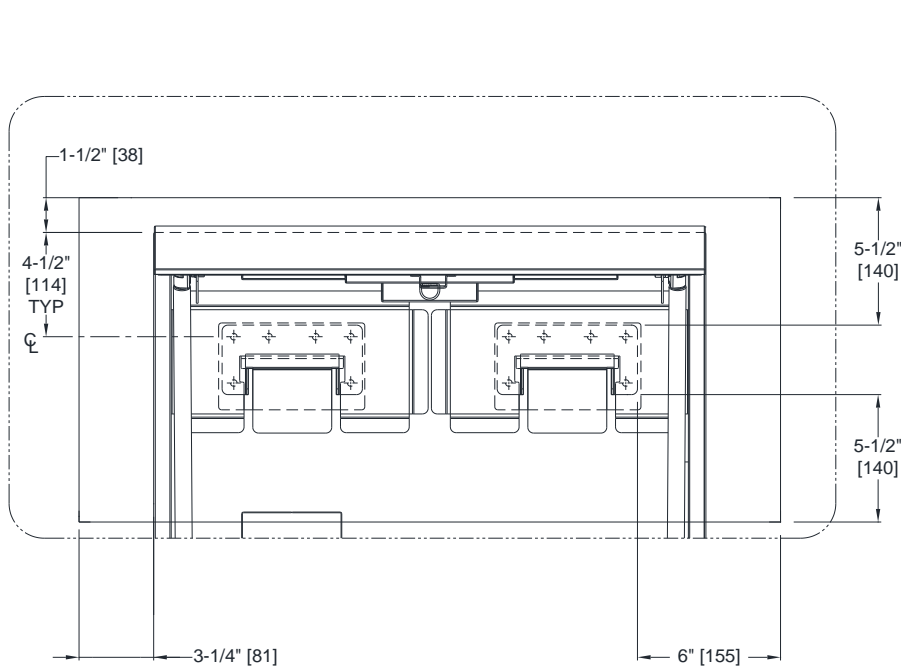


FIG. 3

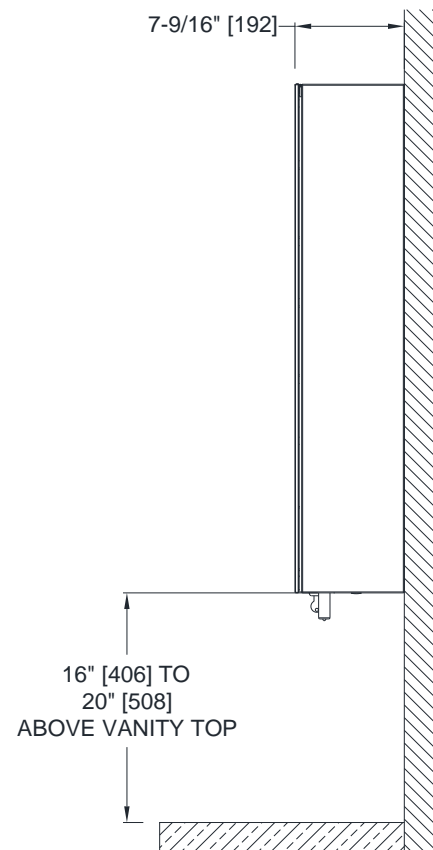


FIG. 4

### **INSTALLATION OF EL-LIGHTING**

Connect the two (2) output connector plugs of the 12V AC/DC Adapter with 2 Outputs (provided) into the two (2) DC Power switches' sockets (provided) located at the top of the cabinet. Connect the 12V AC/DC Adapter (provided) to the quad outlet (by others). Turn ON the two (2) DC switches (provided).

### **INSTALLATION OF HAND DRYER**

Electrical service is supplied and connected by others. The power wiring should go through the KO located at the Hand Dryer Bracket. Refer to 0196-OM for power wiring installation. Hand Dryer Cover can be removed by removing the two (2) black plastic hole caps located at the bottom of the cabinet to access the cover security screws with the security hex key provided with the 0196 dryer.

### **INSTALLATION OF LIQUID SOAP DISPENSER**

Liquid Soap Dispenser includes power supply adapter (provided, item 1) to be connected into one of the quad outlets (by others).

Soap Tank can be filled by removing the soap tank from soap tank holder bracket and unscrewing the cap.

Fill the tank with liquid soaps with a pH in range  $7 \pm 1.5$  and viscosity in range 100 ~ 3800 cP (mPa•s).

Close the cap after filling and place the soap tank back to the soap tank holder bracket. Make sure the soap tube reaches to approximately 1/4" [6] above the bottom of the soap tank through the guide sleeve and it is not bent or curved.

### **INSTALLATION OF PULL-DOWN STRAP (BY OTHERS)**

For ease of service by height challenged individuals an optional strap (not supplied, by others) can be attached to the D-ring welded onto the T-track raceway on the inside of the mirror door (see Fig.5). This will provide a lower pulling point to aid in closing the door to the point that the gas struts will assist in final closing to shut position.



**AMERICAN SPECIALTIES, INC.**  
441 Saw Mill River Road, Yonkers, NY 10701  
(914) 476.9000 • (914) 476.0688  
www.americanspecialties.com

**MODEL No:** 0661-1/2

**ISSUED:** 29 JAN 2019

**REVISED:** 23 JAN 2020

## VELARE™ BTM SYSTEM CABINET INSTALLATION GUIDE (Pg 3 of 3)

**WIRING AND TUBING NOT SHOWN FOR ENHANCED CLARITY**

