

Installation

S19294JB

Barrier-Free Cabinet-Concealed Swing-Down
Eye/Face Wash with Tailpiece

S19294JBD



Barrier-Free Cabinet-Concealed Swing-Down
Eyewash with Daylight Drain

S19294JBT

Barrier-Free Cabinet-Concealed Swing-Down
Eye/Face Wash with P-trap

Table of Contents

Pre-Installation Information.....	2
Dimensions	3
Installation	4
Assembly of Components.....	5-6
Parts List.....	6

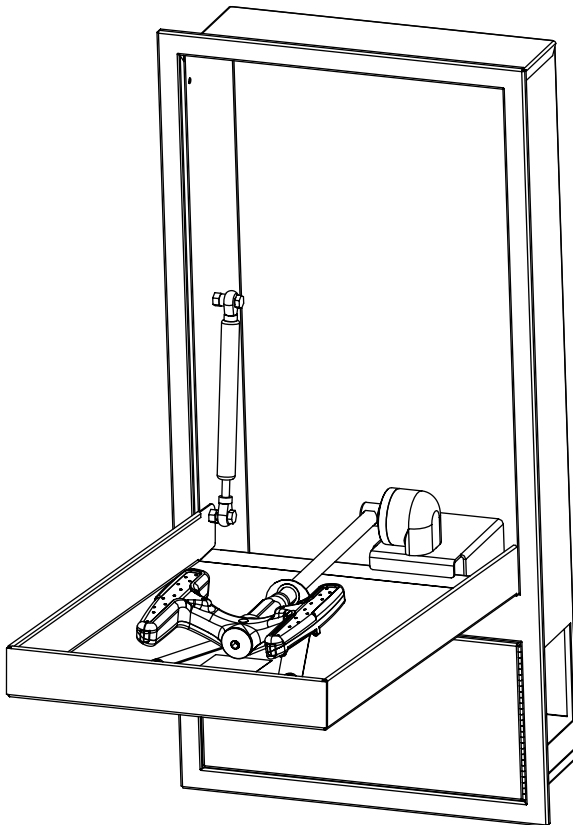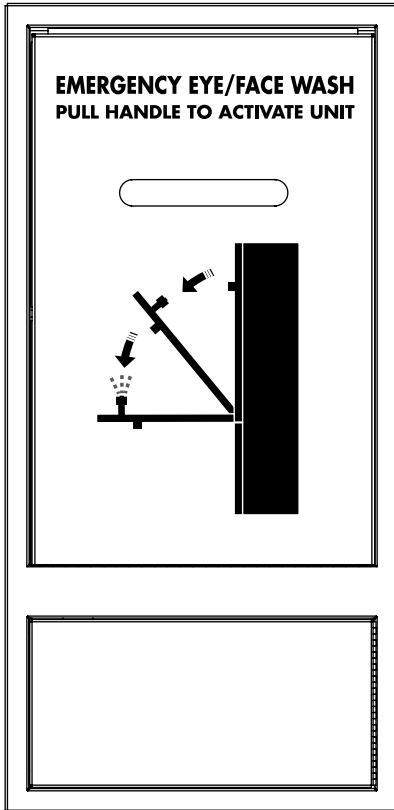

WARNING

Flush the water supply lines before beginning installation and after installation is complete. Test the unit for leaks and adequate water flow. Main water supply to the eyewash should be "ON" at all times. Provisions shall be made to prevent unauthorized shutoff.

CAUTION

Emergency equipment must be supplied with tepid water (60°F to 100°F/15.6°C to 37.8°C). Any prolonged exposure to near freezing water affects the body's ability to maintain body temperature, increasing the risk of hypothermia.

NOTICE

Before installing this product, ensure that there are adequate clearances around the product and activation of the product does not interfere with other products or obstructions.

Avoid cleaners containing organic solvents, alcohols and hydrocarbons. Rinse with water after cleaning.

IMPORTANT

The installation and location of all safety drench showers, eye and eye/face washes must comply with the requirements of ANSI/ISEA Z358.1.

Read this installation manual completely to ensure proper installation, then file it with the owner or maintenance department. Compliance and conformity to drain requirements and other local codes and ordinances is the responsibility of the installer.

Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.

The ANSI/ISEA Z358.1 standard requires an uninterrupted supply of flushing fluid. Bradley plumbed emergency fixtures require a minimum of 30 PSI (0.21MPa) flowing pressure.

Weekly activation must be conducted on all plumbed emergency equipment to ensure a suitable flushing fluid supply is present and any sediment build-up in the supply line is cleared. Emergency equipment should be inspected monthly to address any maintenance issues ensuring the equipment is in good operating condition and that there are no signs of wear.

Workers who may come in contact with potentially hazardous materials should be trained regarding the placement and proper operation of emergency equipment per ANSI/ISEA Z358.1.

For questions regarding the operation or installation of this product, visit www.bradleycorp.com or call 800-BRADLEY (272.3539).

Product warranties and parts information may also be found under "Products" on our web site at bradleycorp.com.





Supplies Required:

- Piping to ½" NPT water supply inlet on unit
- Bolts for cabinet mounting
- Pipe sealant
- Sign-mounting hardware




Local codes may require the installation of a backflow prevention valve to complete proper installation. Compliance with local codes is the responsibility of the installer. Valve must be tested annually to verify that it is functioning properly. Backflow prevention valves are not included with the fixture and may be supplied by the contractor or purchased from Bradley Corporation.


Dimensions

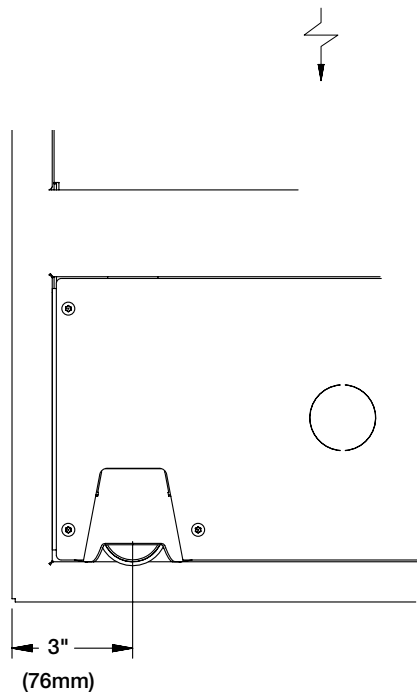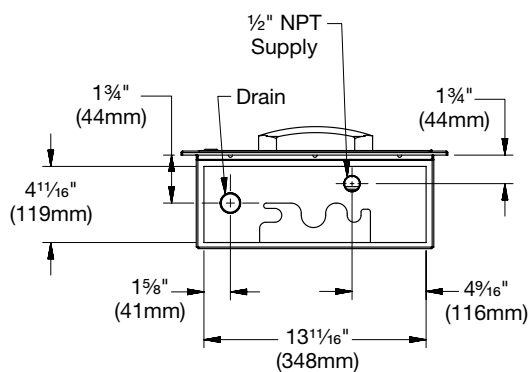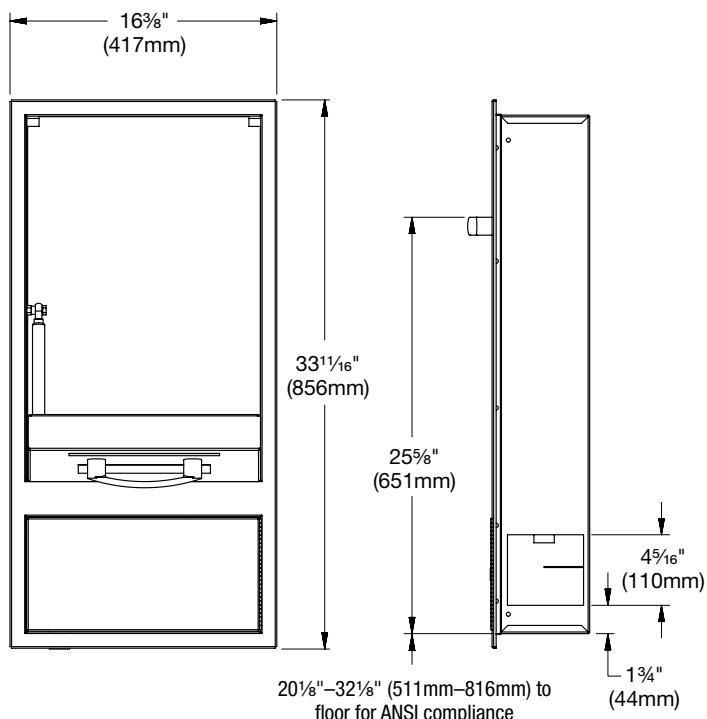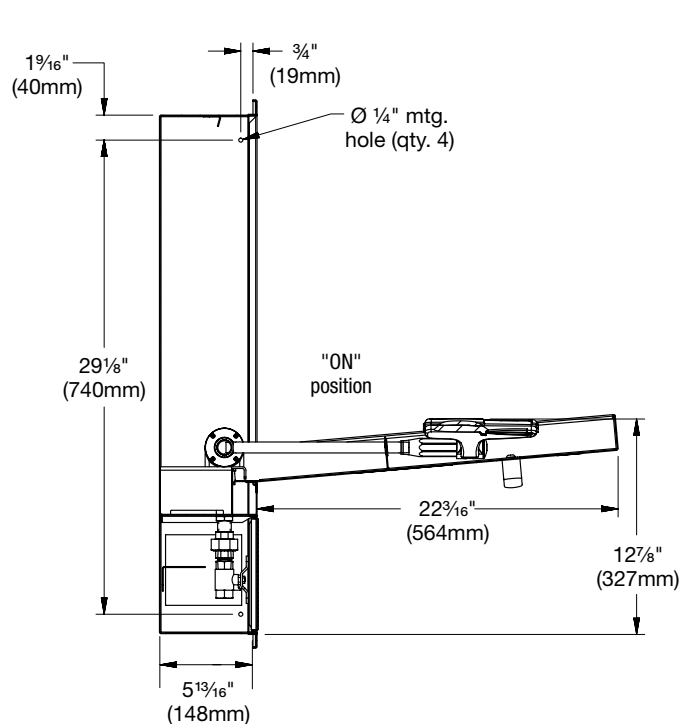

Installation

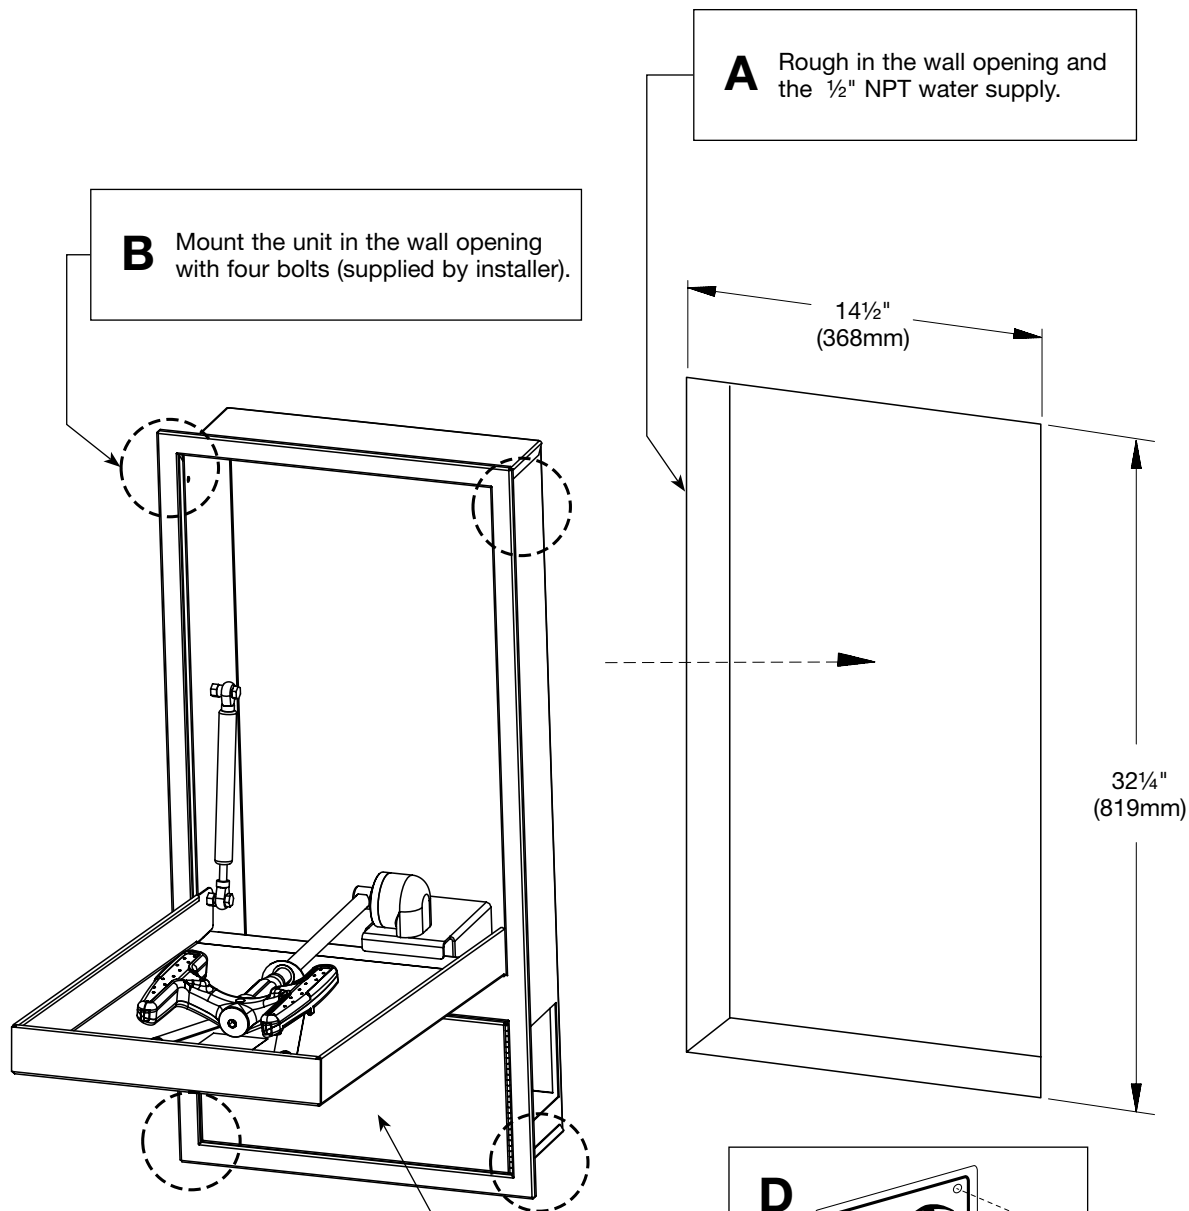

C

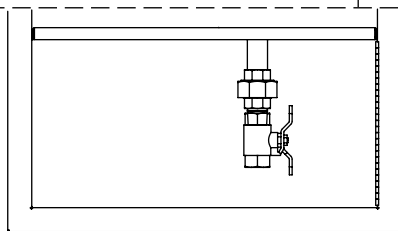


With the cabinet door removed, connect the water supply.

Tailpiece: Connect the non-flanged end to the drain pipe and the other end to the 1 1/4" waste.

P-trap: Connect to the drain pipe and adjust for side or rear drain according to your application. Connect the other end to the 1 1/4" waste.

Daylight drain: Connect the non-flanged end of the tailpiece to the drain pipe. Connect the top of the Elbow to the tailpiece, align elbow with the drain hood on the cabinet door.

D

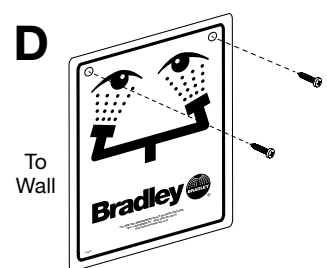

E


Slowly open the water supply lines to relieve air and pressurize the valve. Test the unit for leaks and adequate flow.

F


Reattach service door with 4 screws supplied with unit.

Assembly of Components — S19294JB, S19294JBD and S19294JBT



☒ Shown in the "ON" position.

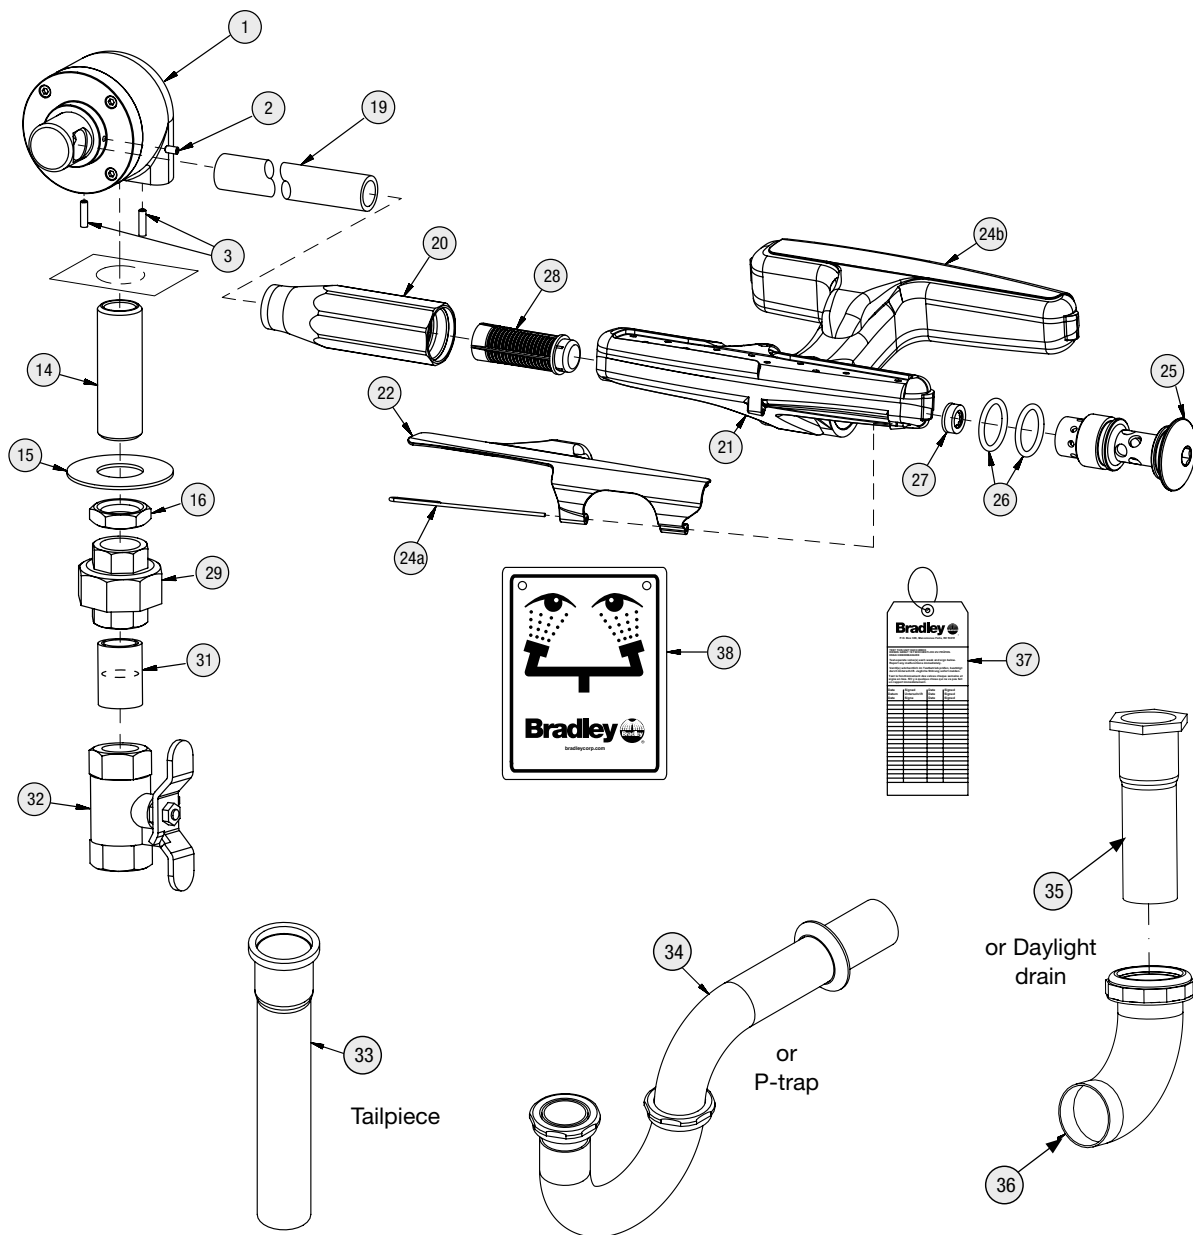


Prepack S65-339 includes items 26, 27, 28
Prepack S88-068 includes items 25, 26, 27, 28

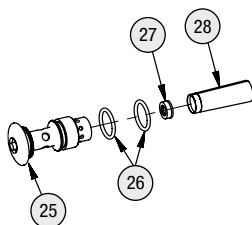

Eye/Face Wash Cover
Prepack S45-2676 includes
items 22, 24a and 24b

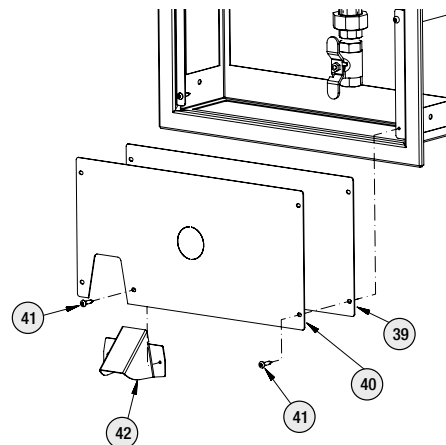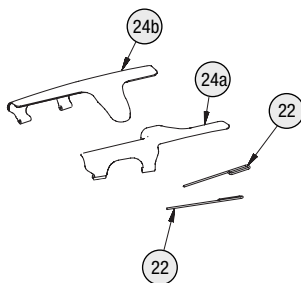

Assembly of Components — S19294JB, S19294JBD and S19294JBT

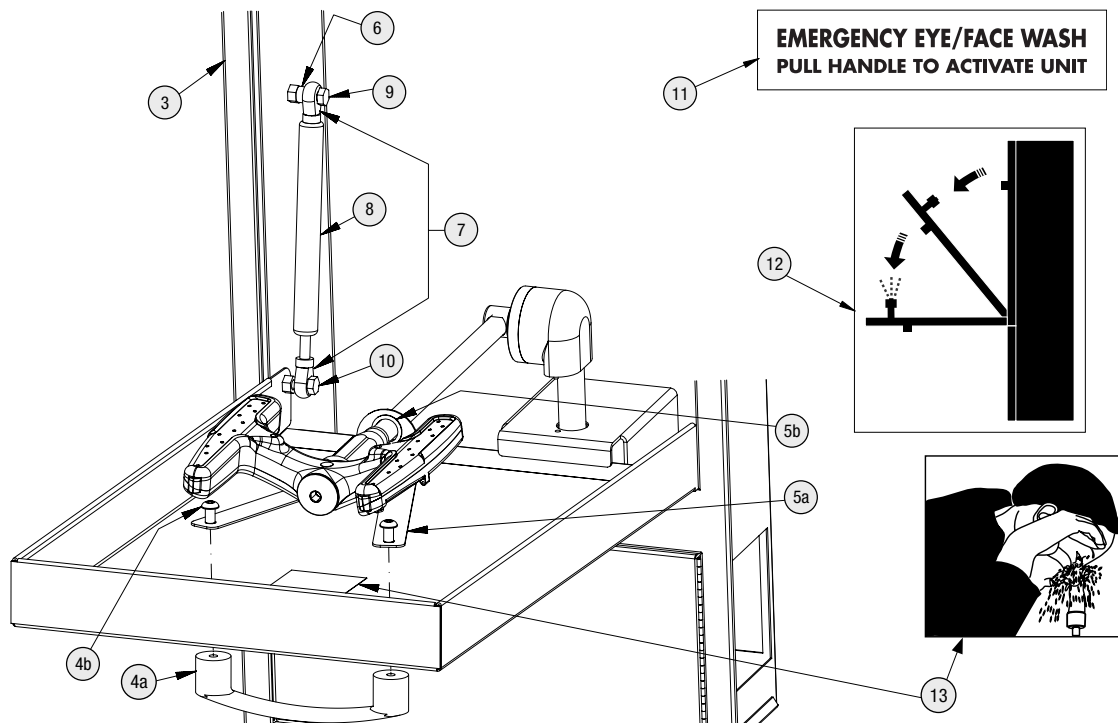

Parts List — S19294JB, S19294JBD and S19294JBT

Item	Part No.	Qty	Description	Item	Part No.	Qty	Description
1*	N/A	1	Valve not available for service; must replace with S39-806BF	21	S05-192	1	Sprayhead Ass'y Eye/Face Wash (incl.)
2	160-473	1	Screw, Set 6-32 x 1/4	22	in service kit	2	Pivot Pin
3	160-474	2	Screw, Set 6-32 x 1/2	24a	in service kit	1	Flip Cover, Right
4a	128-171	1	Handle	24b	in service kit	1	Flip Cover, Left
4b	160-061	1	Screw	25	115-158	1	Cap
5a	140-1082	1	V-bracket	26	125-157	2	O-Ring
5b	269-2097	1	Bearing	27	125-175	1	Flow Control
6	182-118	1	Spacer	28	S65-340	1	Screen (incl. 3 per pack)
7	269-1836	2	Rod End (eyelet)	29	169-348	1	Union
8	269-1835	1	Gas Spring	31	113-006DH	1	Nipple, Close
9	160-264	1	Bolt, 5/16-18 x 1"	32	S27-342	1	Stop Valve
10	160-458	1	Bolt, 5/16-18 x 3/4"	33	269-1830	1	Tailpiece (S19-294HB)
11	204-602	1	Decal, Pull Down	34	269-142	1	Tubular Trap, 1 1/4" (S19-294HBT)
12	204-603	1	Decal, Concealed Eyewash	35	111-147	1	Tailpiece (S19-294HBD)
13	204-665	1	Decal	36	111-146	1	Elbow (S19-294HBD)
14	113-1237	1	Shank, 1/2" x 2 1/2"	37	204-421	1	Emergency Inspection Tag
15	142-002CB	1	Washer, Flat 7/8" x 2"	38	114-051	1	Safety Sign
16	110-115	1	Nut, Brass 1/2"-14 NPSM	39	186-2301	1	Door
19	113-1230	1	Pipe, 3/8" x 11 1/4" Chrome Red Brass	40	186-2302	1	Door Daylight Drain
20	171-006	1	Body, Mount 3/8" NPT Female	41	160-457	4	Screw
				42	140-1310	1	Daylight Drain Cover

* S39-806BF includes Items 1, 2, 13, 14, 16, 19, 20, 21 (less flip covers and pivot pins), 25, 26, 27, 28. The sprayhead assembly in this kit does not include flip covers. Therefore, Service Kit S45-2676 must be ordered separately.