

8090 (CONCEALED LATCH)

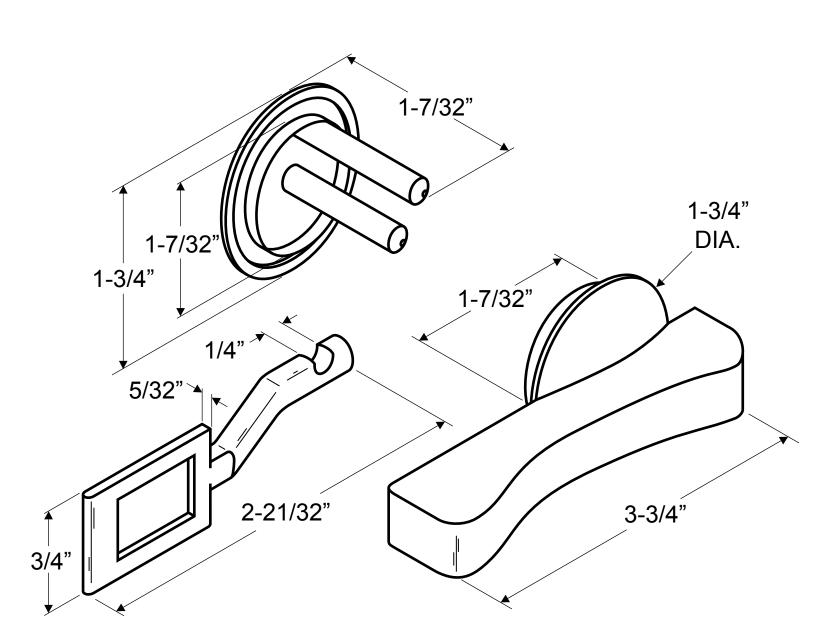

NOTE: LATCH CAN BE USED WITH ADA DOORS

INSTRUCTIONS FOR INSTALLING 5090, 6090, 8090 CONCEALED LATCHES

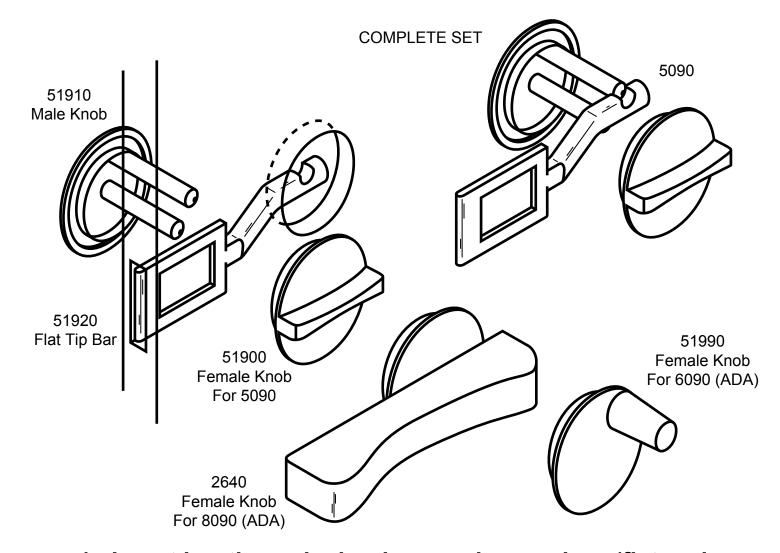

- 1. Insert bar through circular opening on door (flat end first) and then through slot on side.
- 2. Insert male knob in door, engage upper pin of knob into notch of flat tip pin.
- 3. Insert female knob engage both pins of male knob, hold one knob and apply pressure to the other to to engage retainer ring.

REMOVAL - To remove latch, drill 3/8" diameter hole through center of female knob 5/8" deep. Pull knob set apart.